

Deterring Unauthorized Copying

Printing a concealed security watermark ([Copy Protect])

Text such as "Copy" and "Private" are printed in the background pattern as concealed text. This function is called the Copy Protect function.

When a copy-protected document is copied, the concealed security watermark appears on the entire page, thereby indicating that it is an unauthorized copy.

For details, refer to [Here](#).



Tips

- ❖ This function is available when the Web browser function is disabled. When the optional **Extension Memory** is installed, this function is available regardless of whether the Web browser function is enabled or disabled. Some models provide **Extension Memory** as standard. For details, refer to [Here](#).



Reference


- ❖ You can register and edit copy protect data using the **Web Connection** data management utility. For details, refer to [Here](#).

Adding a stamp on the entire page ([Stamp Repeat])

Stamp such as "Copy" and "Private" are printed on the entire page.

By printing text such as "Copy" or "Private" as a visible stamp, you can deter unauthorized copying.

For details, refer to [Here](#).

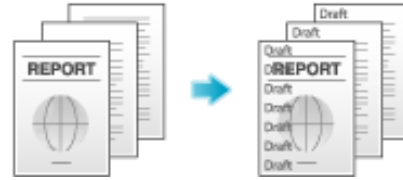

Tips

- ❖ This function is available when the Web browser function is disabled. When the optional **Extension Memory** is installed, this function is available regardless of whether the Web browser function is enabled or disabled. Some models provide **Extension Memory** as standard. For details, refer to [Here](#).



Reference

- ❖ You can register and edit stamp data using the **Web Connection** data management utility. For details, refer to [Here](#).

Adding copy restriction information ([Copy Guard])

Copy Guard is a copy protection function that prints concealed security watermarks such as "Private" or a date in the background to prevent unauthorized copying, and embeds a copy restriction pattern on all printed sheets.

If an attempt is made using a device that supports the copy guard function to copy a sheet that has been copy protected, a copy guard pattern is scanned, the copying process is canceled, and the job is deleted.

For details, refer to [Here](#).



Tips

- ❑ The optional **Security Kit** is required to use this function. Also, the function must be enabled on this machine. For details on how to enable the function, refer to [Here](#).
- ❑ This function is available when the Web browser function is disabled. When the optional **Extension Memory** is installed, this function is available regardless of whether the Web browser function is enabled or disabled. Some models provide **Extension Memory** as standard. For details, refer to [Here](#).
- ❑ The Copy Guard function does not support color paper, envelopes and transparencies.

Adding a password ([Password Copy])

Password Copy is a copy protection function that prints concealed security watermarks such as "Private" or a date in the background to prevent unauthorized copying, and embeds a password for the password copy function on all printed sheets.

If an attempt is made using a device that supports the password copy function to copy a sheet that has been prepared for password copy, a password copy pattern is scanned and entry of a password is requested. Copying starts if the correct password is entered.

For details, refer to [Here](#).





Tips

- ❖ The optional **Security Kit** is required to use this function. Also, the function must be enabled on this machine. For details on how to enable the function, refer to [Here](#).
- ❖ This function is available when the Web browser function is disabled. When the optional **Extension Memory** is installed, this function is available regardless of whether the Web browser function is enabled or disabled. Some models provide **Extension Memory** as standard. For details, refer to [Here](#).
- ❖ The Password Copy function does not support color paper, envelopes and transparencies.
- ❖ If you fail to enter a password three times, the currently processed copy job will be erased.