


## Entering Characters

When entering characters to register an address or program, use the keyboard screen displayed on the **Touch Panel**.



Item	Description
Keyboard	Tap the keys of characters you want to enter.
[C]	Tap this key to delete a character or value you entered.
[←]/[→]	Tap this key to move the cursor.
[Delete]	Tap this key to delete characters you entered one by one.
[Shift]	Tap this key to enter uppercase letters or symbols.
[Enlarge ON]	Tap this key to enlarge the keyboard.  To release the enlargement, tap [Enlarge OFF].

