

Reducing Power Consumption of the Touch Panel ([Eco Settings])


[Eco Settings]

[Eco Settings] provides a collection of settings to reduce power consumption such as the brightness adjustment of the **Touch Panel**, or animation settings. Changing to Eco contribution settings enlarges the tree on the screen.




Operations required to use this function (for the administrator)

Place [Eco Settings] on the main menu. For details on the setting procedure, refer to [Here](#).

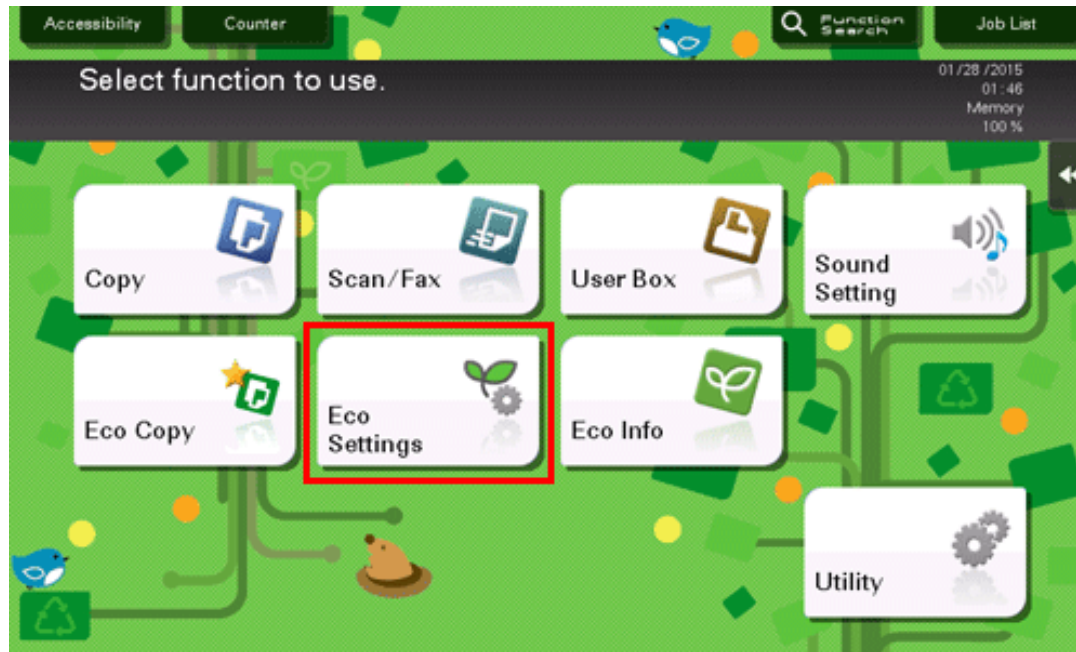

Changing Eco settings

1. Tap [Eco Settings] on the main menu.

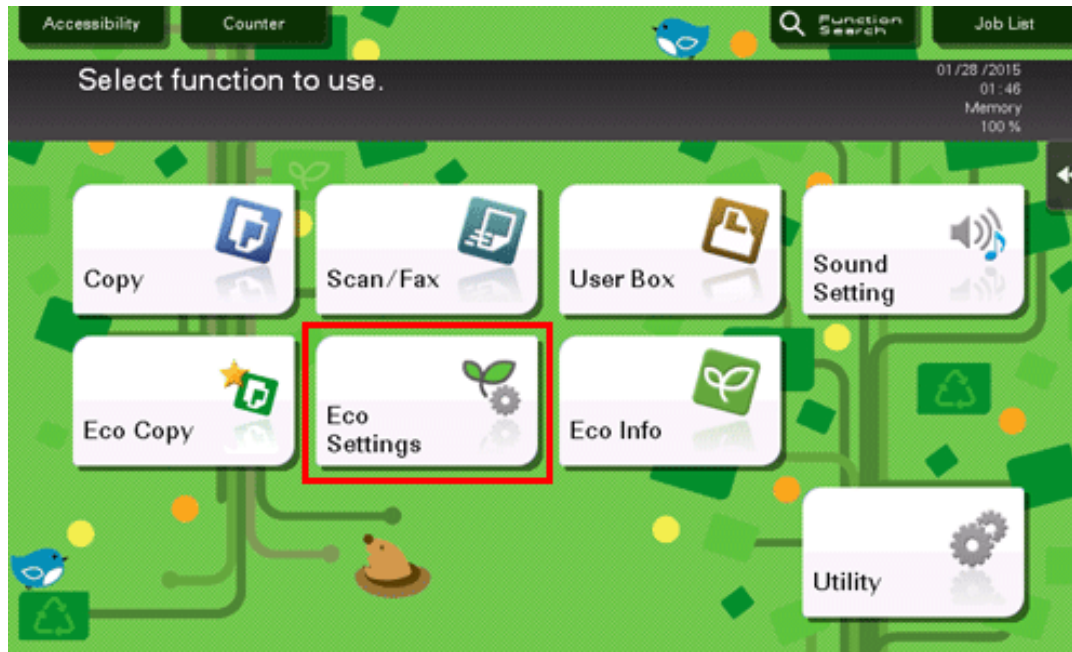

2. Change the following settings to suit your environment, then tap [OK].

Settings	Description
[Brightness Adjustment]	To adjust the brightness level of the Touch Panel , select [Yes], then tap [Low] or [High].
[Animation Settings]	Select whether to display in animation view when opening or closing a pop-up window. If [No] is selected, you will not hear any operation confirmation sound when opening a pop-up window. [No] is specified by default.