



## Cleaning This Machine

### Cleaning the Slit Scan Glass


1. Open the **ADF**.

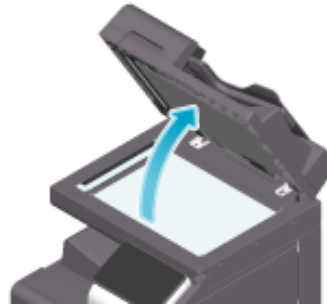


2. Wipe stains off the **Slit Scan Glass** using a dry, clean cloth.

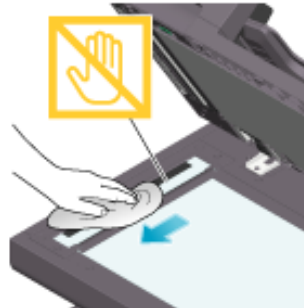


#### NOTICE

 Do not touch the **Slit Scan Glass**.

1. Open the ADF.

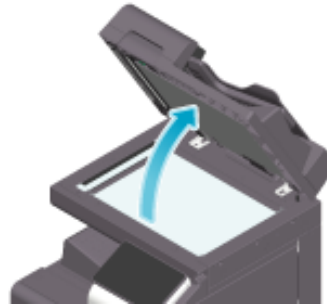


2. Open the Opening and Closing Guide.

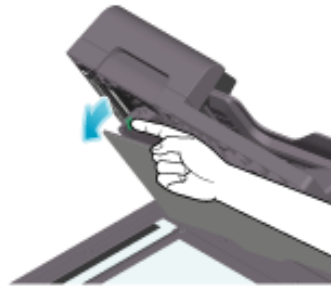

➡ Release the lock lever of the **Opening and Closing Guide**, and open the **Opening and Closing Guide**.

3. Wipe stains off the **Slit Scan Glass (back)** using a dry, clean cloth.

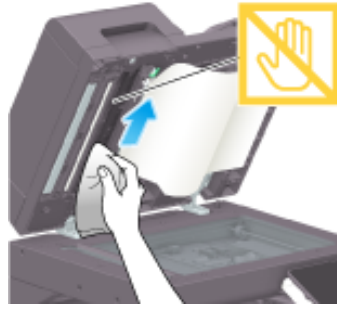

## NOTICE

❏ Do not touch the **Slit Scan Glass (back)**.



### 4. Close the **Opening and Closing Guide** you opened in step 2.




➔ Press the **Hand mark** in the center of the **Opening and Closing Guide**, and check that the **Opening and Closing Guide** is locked securely.

### Cleaning the Original Glass, Control Panel, roller, and Output Belt


Wipe the surface using a soft, dry cloth.

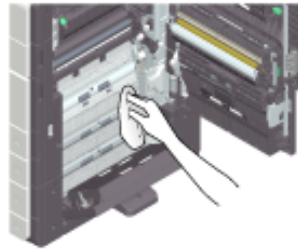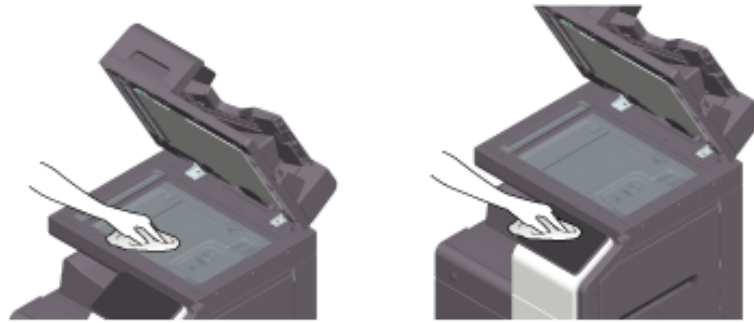


When cleaning the **Output Belt**, make sure that the **Finisher FS-540 SD** is installed on this machine.

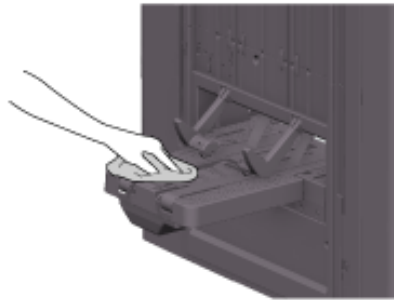

## NOTICE

 Do not press the **Control Panel** hard, otherwise the **Touch Panel** may be damaged.

## CAUTION


 The inside of this product has areas subject to high temperature, which may cause burns. When checking the inside of the unit for malfunctions such as a paper misfeed, do not touch the locations (around the fusing unit, etc.) which are indicated by a "Caution HOT" caution label. A burn could result.

### Cleaning the outer covers and Original Pad

Wipe the surface using a soft cloth moistened with a mild household detergent.



### NOTICE

 Never use solvents, such as benzene or thinner, to clean the **Original Pad**.