


Receiving Faxes Automatically (Using the Machine Solely for Fax Operations)

Auto Reception

Auto Reception is a mode in which to automatically receive faxes when the number of rings occur.

It is helpful to set this machine to automatically receive faxes if the line is dedicated for faxing.

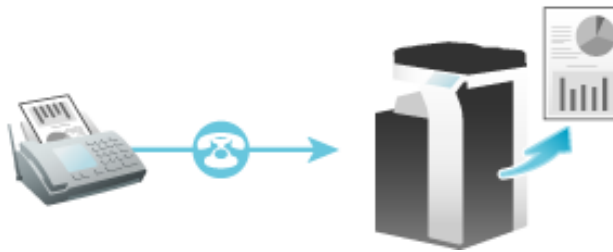

Preparation required to use this function (for the administrator)

To use Auto Reception, configure the following settings in [Line Parameter Setting] ([Here](#)).

| Setting | Description |
|---------------------------|---|
| [Receive Mode] | Set to [Auto RX]. |
| [Number of RX Call Rings] | Set the number of rings that will occur before the machine starts auto reception. |